 


PIPER SUPERCUB PARTS

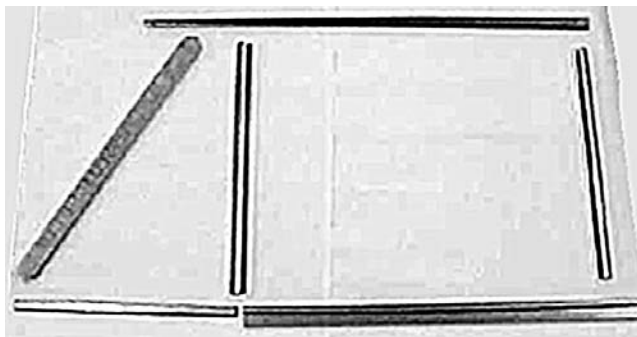

FRONT LOWER WINDOW CHANNEL

Left Side FAA-PMA..... P/N 05-00491

AFT LOWER WINDOW CHANNEL

Left Side FAA-PMA..... P/N 05-00492

FRONT WINDOW CHANNEL

Left Side FAA-PMA..... P/N 05-00493

UPPER WINDOW FORMER

Left Side FAA-PMA..... P/N 05-00494

FORWARD VERTICAL WINDOW CHANNEL

Left Side FAA-PMA..... P/N 05-00495

AFT VERTICAL WINDOW CHANNEL

Left Side FAA-PMA..... P/N 05-00496

ADDITIONAL FAA-PMA PARTS FOR PA18 SUPERCUB

Description	Part No.	Price
Lower Stabilizer brace wire attach.	05-00509	.
Piper hinge - half	05-00510	.
Interior tab	05-00511	.
Pulley bracket	05-00512	.
Pulley bracket	05-00513	.
Forward elevator pulley half	05-00514	.
Flap lever hinge - weld on fuselage or seat	05-00516	.
Flap pulley bracket	05-00517	.
Shock strut	05-00518	.
Trim cable pulley bracket	05-00519	.
fuel selector bracket	05-00520	.
Tailspring bracket	05-00521	.
Tailspring mount pad - forward	05-00522	.
Aileron pulley bracket	05-00523	.
Floorboard tabs	05-00524	.
Floorboard tabs	05-00525	.
Cabane Vee	05-00526	.
Elevator horn	05-00530	.
Rudder horn	05-00531	.
RH rudder pedal assy.	05-00532	.
LH rudder pedal assy.	05-00533	.
RH brake pedal assy.	05-00534	.
LH brake pedal assy.	05-00535	.
3/8 Piper "U" channel - 4' lengths	05-00537	.
5/8 barrel assy. - weld in lift strut ends	05-00538	.
Elevator ribs - full set for one	05-00539	.
Exhaust stack front - PA18 150 hp	05-00542	.
Exhaust stack rear - PA18 150 hp	05-00543	.
Muffler assy. - PA18 150 hp	05-00544	.



PA18 LANDING GEAR

Specify right or left side.
 11/4 axle, heavy duty; FAA-PMA
 P/N 05-00489

11/2 axle, heavy duty; FAA-PMA
 P/N 05-00490

EXTENDED LANDING GEAR AVAILABLE - CALL FOR QUOTE!



REAR TORQUE TUBE SUPPORT & BEARING

Weld on; FAA-PMA P/N 05-00497



FRONT TORQUE TUBE SUPPORT & BEARING

Weld on; FAA-PMA P/N 05-00498



 
REAR STABILIZER ATTACH BRACKET

Tack welded; FAA-PMA P/N 05-00499



HEAVY DUTY 5/8 LIFT STRUT FORK

Rolled threads, stainless, heat treated.
 P/N 05-00501

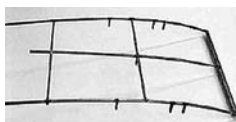

TOP DECK SUPERSTRUCTURE

P/N 05-00502



JACK SCREW TOWER

P/N 05-00503



MUFFLER BAIL U452-093

 
Muffler Bail Welded inside muffler out let to guard against Flame Tube failure and obstruction of exhaust outlet.
 P/N 05-02150



TAIL REPAIR SECTION - 4'

Without Jack screw tower.
 P/N 05-00504

With Jack screw tower
 P/N 05-00505

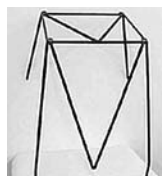

FIREWALL BULKHEAD REPAIR SECTION

P/N 05-00506

AP